




**Wear the appropriate eye protection during the install!**

**CBW UNV 001  
DUAL CLEAN  
ADVANTAGE  
CLUB & BALL WASHER**

**Instructions**

Push latches inward to release the unit and slide upward to remove

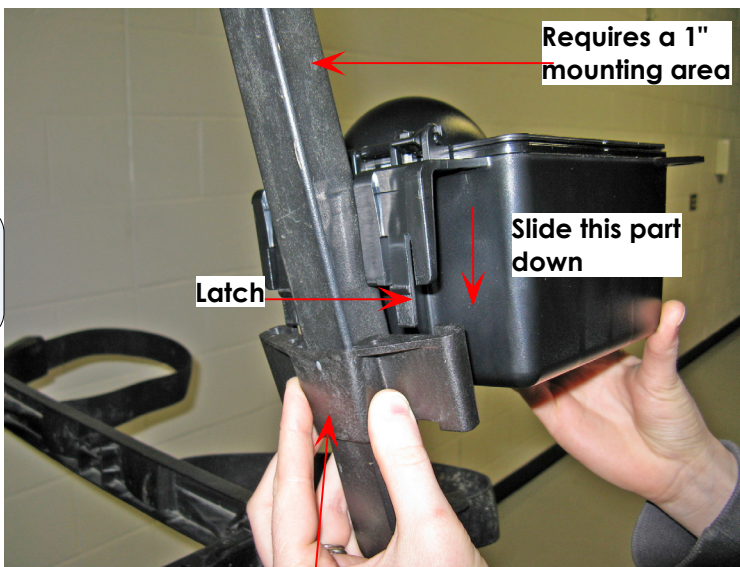

- Place the clamp half in the desired location
- Align the ball wash with the clamp slots and simply slide the unit downward until it "clicks" into place

- Pour approximately 20 ounces of water (Cleaner CBW UNV 002) into the cleaning chamber or enough water to cover slightly more than half of the club cleaning brushes. Water will flow into the ball cleaning chamber filling it as well.
- For best results of club cleaning, make sure the brushes are completely and thoroughly wet. Dry brushes will "grab" the club. Hold the club horizontally with the club head facing towards the ground. Grip the shaft close to the club head. Insert the club head between the brushes so it is in straight alignment with the cleaning slot between the brushes. Use a back and forth motion and an up and down motion to properly clean your clubs.
- Cleaning golf balls is simply inserting the balls into the golf ball cleaning chamber. Turn the handle clockwise or counterclockwise for cleaning.
- Dump the water or solution after each round of heavy use and rinse the unit.

