



13-096
26" Decibel Soundbar
INSTRUCTION MANUAL

**BATTERY
SAFETY
GUIDELINES**

Used correctly, domestic batteries are a safe and dependable source of portable power. Problems can occur if they are misused or abused – resulting in leakage or, in extreme cases, fire or explosion. Here are some simple guidelines to safe battery use designed to eliminate any such problems.

- Take care to fit your batteries correctly, observing the plus and minus marks on the battery and appliance. Incorrect fitting can cause leakage or, in extreme cases, fire or even an explosion.**
- Replace the whole set of batteries at one time, taking care not to mix old and new batteries or batteries of different types, since this can result in leakage or, in extreme cases, fire or even an explosion.**
- Store unused batteries in their packaging and away from metal objects which may cause a short-circuit resulting in leakage or, in extreme cases, fire or even an explosion.**
- Remove dead batteries from equipment and all batteries from equipment you know you are not going to use for a long time. Otherwise the batteries may leak and cause damage.**
- Never dispose of batteries in fire as this can cause them to explode. Please recycle dead batteries; do not put with the normal household waste.**
- Never attempt to recharge ordinary batteries, either in a charger or by applying heat to them. They may leak, cause fire or even explode. There are special rechargeable batteries which are clearly marked as such.**
- Supervise children if they are replacing batteries themselves in order to ensure these guidelines are followed.**
- Remember that small button cell batteries such as used in some hearing aids, toys, games and other appliances, are easily swallowed by young children and this can be dangerous.**
- Keep loose button cells away from young children.**
- Make sure battery compartments are secure.**
- Seek medical advice if you believe a cell has been swallowed.**

1. Safety Warnings


- Read all the instructions carefully before using the unit and keep them for future reference.**
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.**
- Check that the voltage marked on the rating label matches your voltage.**
- Damage**
 - ! Please inspect the unit for damage after unpacking.
 - ! Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, and consult your dealer.
- Temperature**
 - ! Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/ electric fires.

- Safety**
 - ! Always disconnect the unit from input power before connecting/ disconnecting other devices.
- Interference**
 - ! Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted sound.
- Supervision**
 - ! Children should be supervised to ensure that they do not play with the unit and the remote control.
 - ! Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.
- The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the units enclosure that may be of sufficient magnitude to constitute a risk of electric shock.**
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.**
- Service**
 - ! To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
 - ! Do not open any fixed covers as this may expose dangerous voltages.
- Maintenance**
 - ! Ensure the unit is fully unplugged from the power supply before cleaning.
 - ! Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the units surface.
 - ! Do not use any liquids to clean the unit.
- Local Regulations**
 - ! LED lights are for display and off-road use only. Check your local regulations before using LED lights. Do not drive on public roads with LED lights on as they do not meet DOT standards.

- Naked Flames**
 - ! Never place any type of candle or naked flame on the top of or near the unit.
- Moisture**
 - ! To reduce the risk of fire, electric shock or product damage, do not expose this unit to excessive moisture. No objects filled with liquids, such as vases, should be placed on the unit.
 - ! If you spill any liquid into the unit, it can cause serious damage. Unplug it immediately, and consult your dealer.
- Batteries**
 - ! Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
 - ! Please dispose of batteries correctly by following the guidance in this manual.
- Ventilation**
 - ! To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
 - ! Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well-ventilated.


2. Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations. The following items are included:

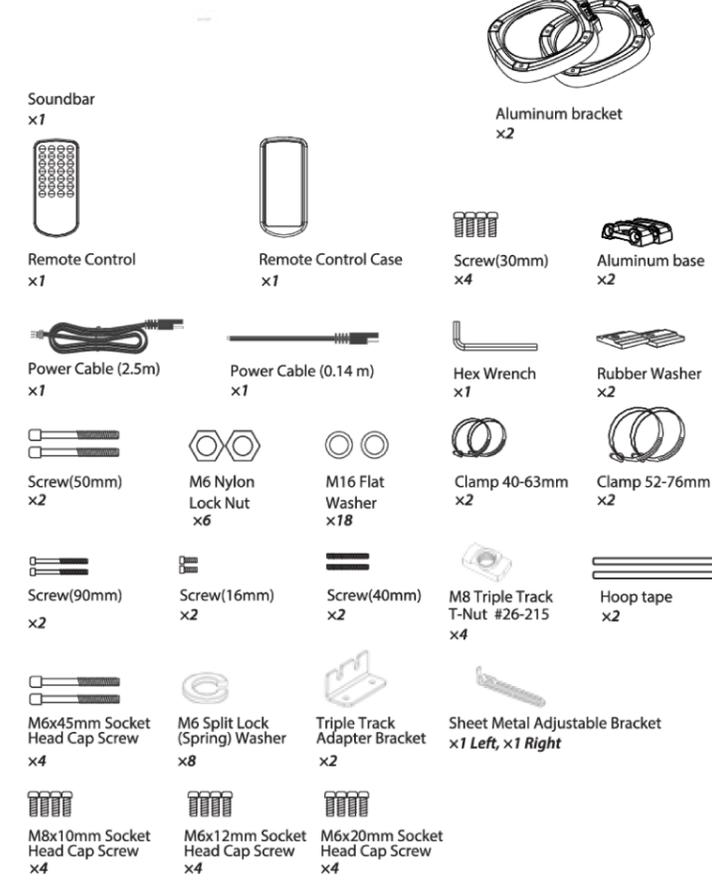

3. Product Overview

Front Panel of the Soundbar

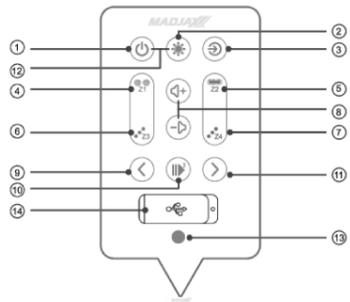


- 1) Power**
Long touch=>2s to switch the soundbar on/off
- 2) Sync Mode**
Touch to enter Sync mode
- 3) Source**
Press to cycle through input sources in the following order: BT -> Aux In -> USB -> FM. Long touch =>2s to enter pairing mode/disconnect current connection in BT mode Long touch =>5s to clear all Bluetooth connections in BT mode
- 4) Z1 light**
Touch to cycle through the main lighting color options in the following order: Bounce -> Gradient -> Red -> White -> Green -> Blue -> Off
- 5) Z2 light**
Touch to cycle through the light band effects in the following order: Red -> White -> Yellow -> Purple -> Blue -> Off
- 6) Z3 light(The light effect is synchronized with the Z1 light)**
Touch to switch the external light on/off. Long touch=>2s to set the currently playing radio station to preset 1 in FM mode
- 7) Z4 light (The light effect is synchronized with the Z1 light)**
Touch to switch the external light on/off.

- 8) Volume up/down**
Increase or decrease the volume Press and hold to decrease or increase the volume continuously
- 9) Previous**
Touch to skip to the previous track in USB/BT mode Touch to tune down the frequency in FM mode Long touch=>2s to scan down radio in FM mode
- 10) Play/Pause**
Touch to start, pause or resume play in USB/BT mode Long touch=>3s to activate your phone's voice assistant in BT mode Touch once to answer the call and again to hang up when there is a call in BT mode Touch to cycle through preset stations/frequencies in FM mode.
- 11) Next**
Touch to skip to the next track in USB/BT mode Touch to tune up the frequency in FM mode Long touch=>2s to scan up radio in FM mode
- 12) Power+ Sync Mode**
Hold down the power and Sync buttons for 5 seconds at the same time to factory reset.
- 13) Remote Control Sensor**
- 14) USB**
Audio input from a USB storage device

LED INDICATOR STATUS *The soundbar has an indicator light below each button.*


LED Indication	Status	Behavior	
Power(backlight)	Power ON	Solid(Red)	
	Standby	Slow breathe(Red)	
Sync Mode (backlight)	Primary Device	Broadcast mode ON	White, solid
		Broadcast mode OFF	-
	Secondary/ Linked Device	Receiver mode ON	White, fast flash
		Connected	White, solid
		Disconnected	White, slow flash 3s and then enter broadcast reception mode
		Receiver mode OFF	-
Source(backlight)	BT ready mode	Solid(Blue)	
	BT pairing mode	Fast flash(Blue)	
	BT connected	Solid(Blue)	
	BT disconnected	Slow flash 3s(Blue)	
	Aux in mode	Solid(Green)	
	USB mode	Solid(White)	
	FM mode	Solid(Amber)	

Back Panel of the Soundbar

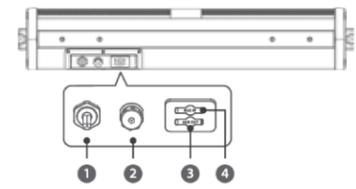

- 1) Power cord (with SAE plug)**
Connect to the power supply
- 2) For external socket (for Z3,Z4 light band and CAN communication)**
Connect to external Z3 and z4 light Connect to the CAN port on the car for communication
- 3) Aux out**
Audio output, connect to an audio amplifier or another speaker
- 4) Aux in**
Audio input from, for example MP3 player or CD player

4. Remote Control

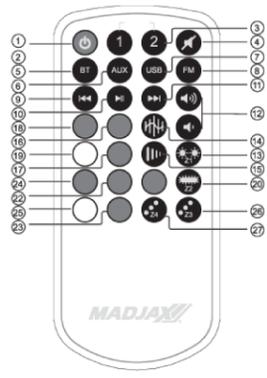

- 1) Power**
Switch the soundbar on/off
- 2) Preset 1**
Switch to preset radio station 1 in FM mode
- 3) Preset 2**
Switch to preset radio station 2 in FM mode
- 4) Mute**
Toggle mute function ON/OFF
- 5) BT**
Switch to Bluetooth mode Long press: 2s to enter pairing mode/disconnect current connection in BT mode Long press: 5s to clear all Bluetooth connections in BT mode
- 6) Aux in**
Switch to Aux in mode
- 7) USB**
Switch to USB mode

- 8) FM**
Switch to FM mode
- 9) Previous**
Press to skip to the previous track in USB/BT mode Press to tune down the frequency in FM mode Long press=>2s to scan down radio in FM mode
- 10) Play/Pause**
Press to start, pause or resume play in USB/BT mode Press once to answer the call and again to hang up when there is a call in BT mode Long press=>3s to activate your phone's voice assistant in BT mode
- 11) Next**
Press to skip to the next track in USB/BT mode Press to tune up the frequency in FM mode Long press=>2s to scan up radio in FM mode
- 12) Volume up/down**
Increase or decrease the volume Press and hold to decrease or increase the volume continuously
- 13) Z1 light**
Switch the Z1 light on/off
- 14) Bouncing light**
Switch the Z1 light to bouncing light
- 15) Gradient light**
Switch the Z1 light to gradient light
- 16) Green light**
Switch the Z1 light to green light
- 17) Blue light**
Switch the Z1 light to blue light
- 18) Red light**
Switch the Z1 light to red light
- 19) White light**
Switch the Z1 light to white light
- 20) Z2 light**
Switch the Z2 light on/off
- 21) Blue light**
Switch the Z2 light to blue light
- 22) Yellow light**
Switch the Z2 light to yellow light
- 23) Purple light**
Switch the Z2 light to purple light
- 24) Red light**
Switch the Z2 light to red light
- 25) White light**
Switch the Z2 light to white light
- 26) Z3 light(The light effect is synchronized with the Z1 light)**
Switch the Z3 light on/off
- 27) Z4 light (The light effect is synchronized with the Z1 light)**
Switch the Z4 light on/off

Remove the Plastic Strip from the Remote Control

Remove the plastic strip from the battery if the battery is being used for the first time. It is located at the bottom rear of the remote control.



Battery Replacement for the Remote Control

The remote control requires a CR2025, 3V Lithium battery.

- Slide and hold the battery release tab in the direction of the arrow.
- Pull out the battery holder and remove the old battery.
- Replace with a new battery.
- Insert the battery holder back into the remote control.

