


28913 Horn Adjustment



Caution: Wear Appropriate Eye Protection!

Horn Terminals

Some horns that have been in stock for long periods of time may need to have the tone adjuster raised or lowered. Locate the tone adjustment screw as shown at right. Break lock nut loose. Depending on sound level turn clockwise or counter-clockwise to obtain the desired sound or to make a sound.

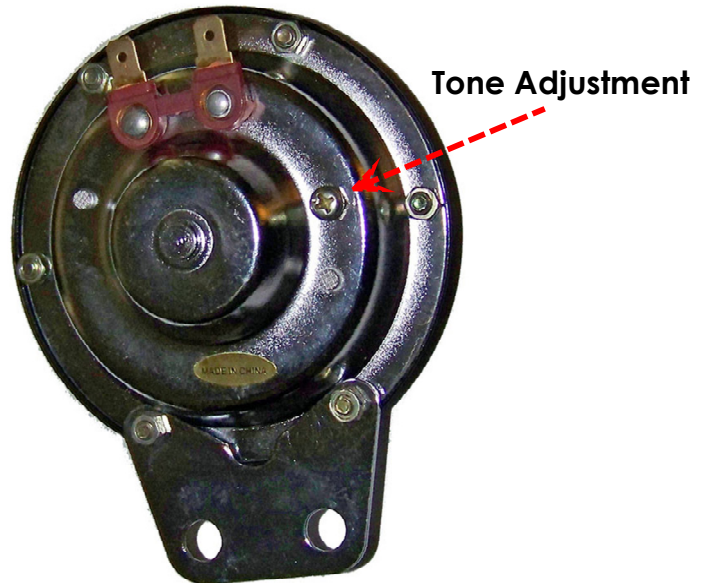

Do not over turn as just a little movement changes the sound a lot. If the sound does not change the unit is defective.

Again, it is normal for a horn to have sound change or none at all during long periods of setting or just from being shipped thousands of miles.

