Yamaha G14-G22 Rocker Combo Installation Instructions Diamond Plate- Part# 28387





Parts List

A-Driver Combo-2 B-Passenger Combo-1 C-Bolt Kit-1

D-Top Mounts-2 E-Bottom Mounts-2

F-Front Support Bracket-2

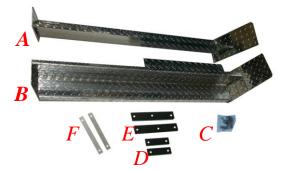




NOTE: The installation of these rocker combos requires drilling. Before doing any drilling make sure you will not contact the fuel cell, any fuel lines, cables or electrical wires. If any of these are in the way of where you are drilling remove before drilling and then re-install when finished.

INSTALLATION INSTRUCTIONS

- 1. Remove the stock rockers from the passenger side of the car.
- 2. Using 1 each of the supplied mounts Item E & D, bolt the mounts to the stock rocker under carriage as shown in Figure 1 using the supplied 5/16 x 1 ½ bolts, washers & locknuts.
- Slide the new rocker combo into place in the stock rocker location. On some models you may need to loosen the rear body and pull up to give the new rocker cover room to fit between the floormat and body.
- 4. From the rear section of the rocker measure up 2" and in 1" and drill a 1/4" hole through the rocker combo and the stock rocker as shown in Figure 2. Bolt rocker combo to the car using the supplied ½ x ¾ bolt, washer & locknut.
- 5. On the front section of the rocker measure up 2" and in 1 ½" and drill a ¼" hole through the rocker combo and the stock rocker. Bolt rocker combo to the car using the supplied ¼ x ¾ bolt, washer & locknut.




Mount to the floor using the supplied ¼ x ¾ bolt, washer, & locknut.

- 7. Reinstall floor mat.
- 8. Repeat steps 1-4 for the driver side of the cart.







Using the bottom

mount hole as a guide drill a 1/4" hole through

the rocker combo

