


WND YA3 WTINT WND YA3 WCLR Winged Windshield Tinted & Clear Yamaha G14/G16/G19/G22(GMax)

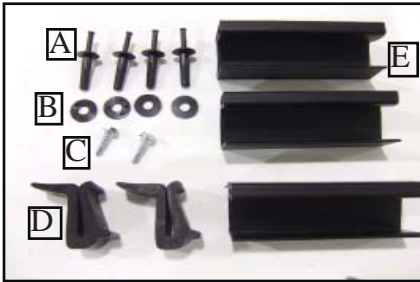

- Components
- A. Rivets (4)
 - B. Washers (4)
 - C. Self Drilling Screws (2)
 - D. Upper Windshield Retainers (2)
 - E. Windshield Clips (3)



CAUTION: Remember to wear appropriate eye protection while performing the tasks in this instruction.

Installation Instructions

1. Attach and evenly space (3) windshield clips to the strut that runs across dash of cart. (See figure 1)
2. Place the windshield so that it rests in the (3) windshield clips. Open windshield.
3. Locate the four grommets on the windshield and use a marker to mark locations to be drilled. (See figure 2) The grommets should align with roof struts.
4. Remove windshield from (3) windshield clips.
5. Drill marked holes using a 1/4" drill bit.
6. Place the windshield back in the (3) windshield clips. Place a plastic washer between the windshield and the roof strut so that it is aligned with a grommet. Place rivet through grommet on windshield, washer, and drilled hole.
7. Using a hammer or mallet, tap rivet lightly until rivet is flush with windshield. Repeat using the other rivets and washers. (See figure 3)
8. Install (2) upper windshield retainers. (See figure 4) Clip retainer to strut and use self drilling screw to attach the retainer to the strut. This will be drilled on the inside of the strut. (See figure 5)

NOTE: Please read additional cleaning instructions for proper care of windshield.



Figure 1



Figure 2



Figure 3

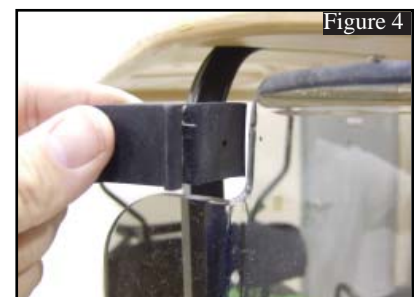


Figure 4



Figure 5