



01-067

GENESIS 250/300

TRAILER HITCH (UNIVERSAL)

INSTALLATION INSTRUCTIONS

INCLUDED:

Receiver Bracket
Ball Mount
Pin + Clip
Hardware Pack

TOOLS NEEDED:

17mm socket
17mm wrench
Ratchet





Ball Mount w/ Pin & clip



Receiver Bracket


Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

1
Using a 17mm socket and wrench, remove nut from "tow mode" bolt and back out bolt until it is flush with frame. Repeat on opposite side.

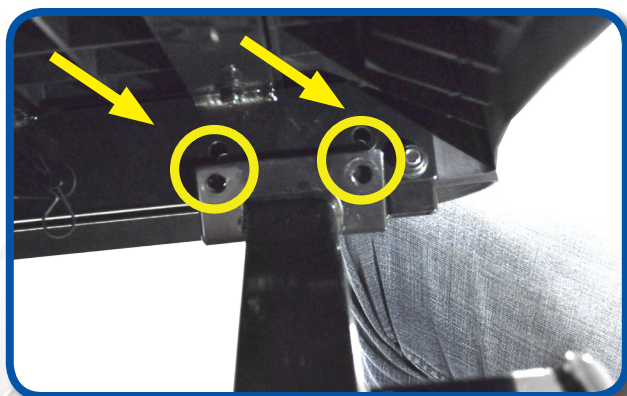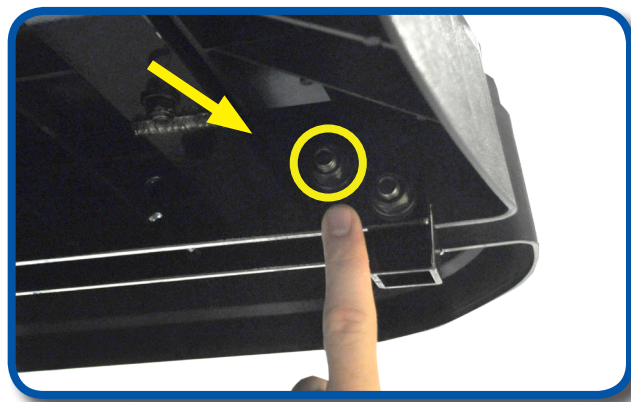

2
Slide receiver bracket between footrest frame. Line bracket holes with frame holes highlighted in picture.

Using footrest frame bolts from Step 1 and supplied 10x30mm bolts attach receiver bracket to footrest. Once all 4 bolts are in place tighten hardware with 17mm wrench and socket.

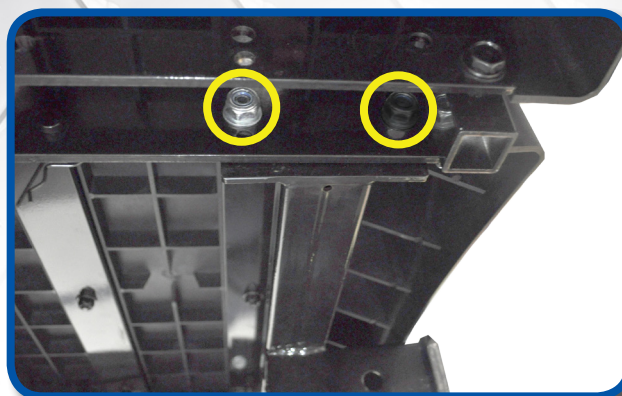

Attach ball mount into receiver using supplied pin and clip.

HARDWARE PACK

Pack 1

- 2- 10mm x 30mm hex head bolts
- 4- 10mm flat washers
- 2- 10mm lock nuts

WARRANTY PARTS

W01-105

- Hardware pack with Pin & Clip

INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS.