



02-137 FRAME KIT **02-138** TOP KIT UNDERGLOW 02-139 EXPANSION KIT

Each kit sold separately

INSTALLATION INSTRUCTIONS

ITEMS INCLUDED				TOOLS NEEDED
FRAME KIT LED Strips Extension Wires LUX Module Set of Zip Ties	QTY 2 2 1 1	TOP KIT LED Strips Extension Wires LUX Module Set of Zip Ties	QTY 2 2 1 1	FLUSH CUTTERS ALCOHOL PREP PADS WIRE CUTTERS WIRE STRIPPERS CRIMPERS
EXPANSION KITLED StripsExtension WiresSet of Zip Ties	QTY 2 2 1			

STEP 1:


Lift your cart and ensure it's stable for your safety.




STEP 2:

Connect the LUX module to a 12-volt power source, and match the colors: connect red to 12V+ and Black to 12V-.



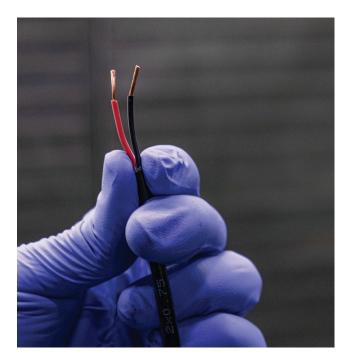

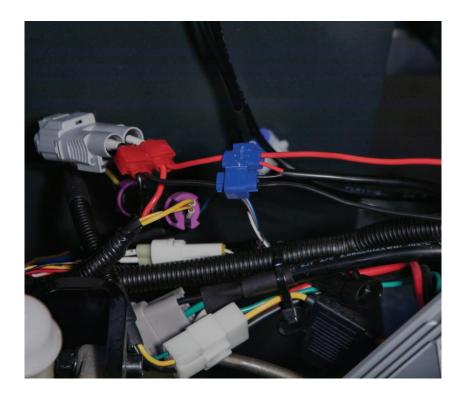

STEP 3:

Secure the Lux module to the front wall of the battery compartment using double-sided tape or any method that works best for you.






STEP 4:

Connect the first LED strips to the Lux module using a jumper in between. Align the arrows on the smaller connectors, and ensure the jumper is securely fastened with the cap.





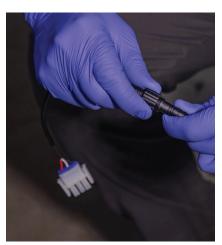






STEP 5:

Select the locations for the strips under your cart, and clean the surfaces thoroughly to ensure the adhesive will hold properly.

STEP 6:

Peel the adhesive backing from the LED strip and firmly press onto the selected surface, starting at one end of the strip and proceeding to the other.

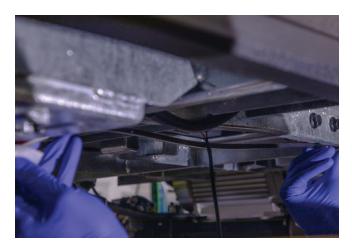




STEP 7:

Repeat Step 6 for the remaining LED strip(s), connecting them to each other using the included extensions.




STEP 8:

Secure the strips with zip ties for extra security.

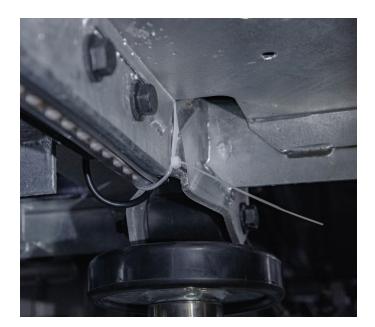



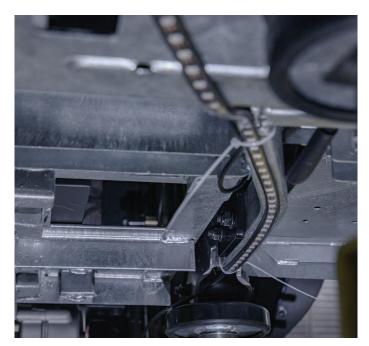

STEP 9:

Carefully double check that all wires are routed securely with zip ties so they do not hang below the cart, preventing anything from getting caught or snagged while driving.

INSTALLATION COMPLETE