20124/25/26 Two Tone Seats Precedent

Caution! Wear appropriate eye protection during the installation!

Mount Seat Hinge with 1/4" X 3/4" USS Bolts

Drill Pre-Existing Hip Restraint Hole Large Enough To Accommodate A 1/4" Bolt

Install Hip Restraint To Seat Bottom Using 1/4" X 1" USS bolts. You Will Need To Push Inward Hard To Align Bolts. Remove Restraint And Measure For Second Hole.

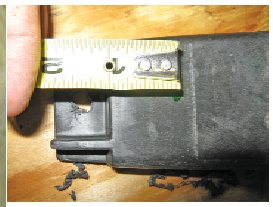

Drill Second Hole Large Enough To Accommodate A 1/4" Bolt

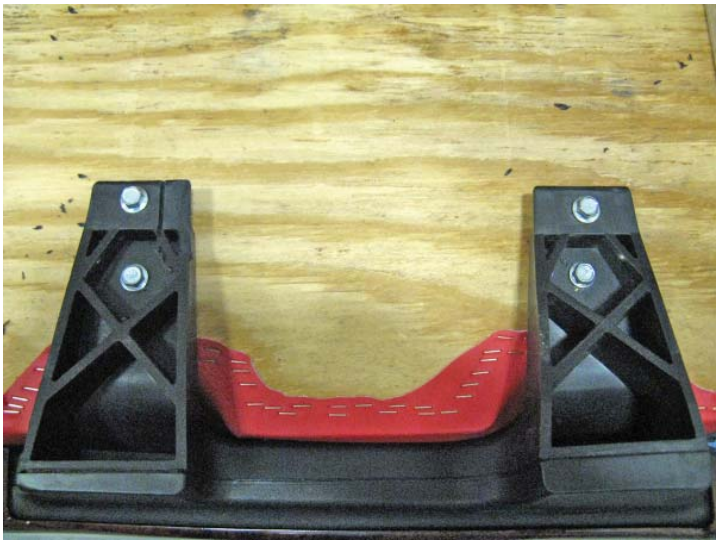

Set Restraints In Place And Install 1/4" X 1" USS Bolts. Some Force Inward Will Be Needed For Alignment

On Car.....

© Copyright Nivel LLC
All Rights Reserved