

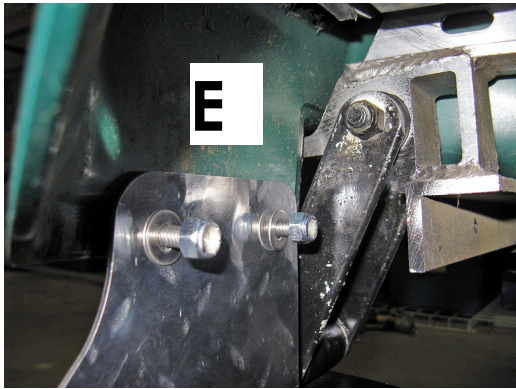
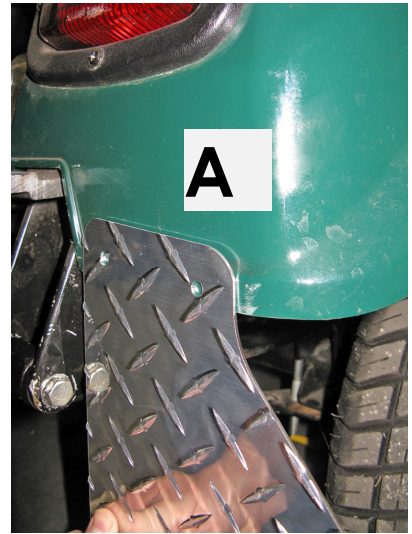
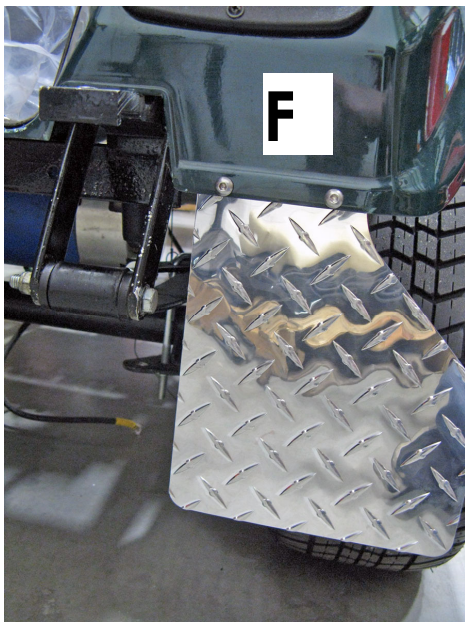
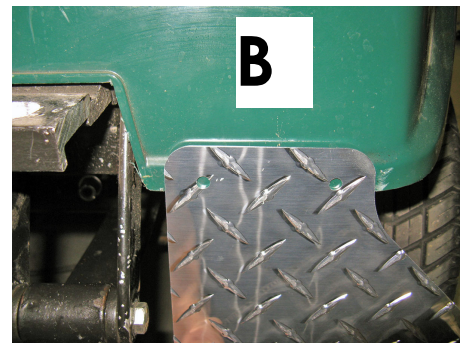


28381 Mud Guard

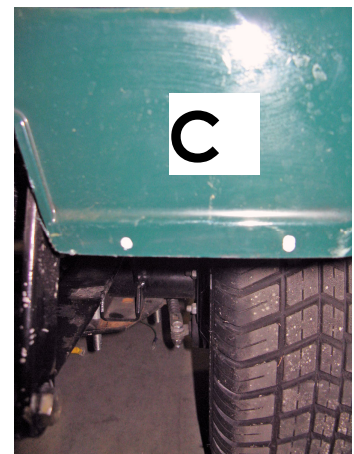

- A = Center Guard On Rear Fender Well
- B = Mark Holes With Sharpie
- C = Inspect Area Making Sure Not To Drill Into Something You Should Not!
- D = Use A 1/4" Drill Bit Centered
- E = Install Guard On Inside Of Fender Well
- F = Tighten Screws Securely

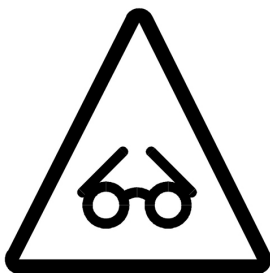

Caution: Wear Appropriate Eye Protection!

