

SoftSwipe™ Mounting Instructions for



- 1) The most convenient location to mount the SoftSwipe™ is on the kickboard (see photo)
- 2) Use an electric screw driver and allow the screws to self drill and tighten in one motion. Screw heads need only to touch the SoftSwipe™ base.

CAUTION: Do not over tighten the screws. This could cause damage to the mounting base.

WARNING: Not mounting the SoftSwipe™ as shown and instructed, could lead to potential safety issues.




Mounting Instructions



SoftSwipe™ Mounting Instructions for



(Electric Vehicles ONLY)

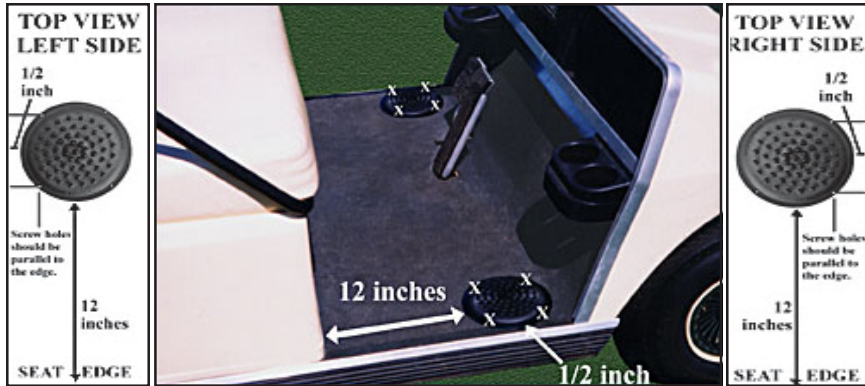

- 1) Use a ruler to position the SoftSwipe™ on the floorboard 12" forward from the bottom edge of the seat and 1/2" from the edge of the golf car. Screw mounting holes should be parallel to the outer edge of the cars' floorboard, as shown with the X's in the photo above.
- 2) Use an electric screw driver and allow the screws to self drill and tighten in one motion. Screw heads need only to touch the SoftSwipe™ base.



CAUTION: Do not over tighten the screws. This could cause damage to the mounting base.

WARNING: Not mounting the SoftSwipe™ as shown and instructed, could lead to potential safety issues.



SoftSwipe™ Mounting Instructions for



This photo shows the preferred mounting locations in an E-Z-GO golf cart for the SoftSwipe™ non-metal spike cleaners.

DRIVERS SIDE: The outside edge of the SoftSwipe™ should be approximately 1" from the molding screw. The molding screw should also line up with the holes on each side as shown

Only 3 screws should be used on the drivers side. The screw hole towards the front of the cart should be left empty, due to an extremely hard sub-floor support.

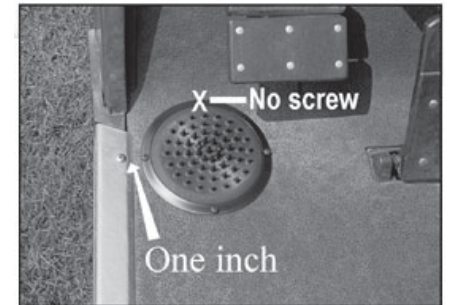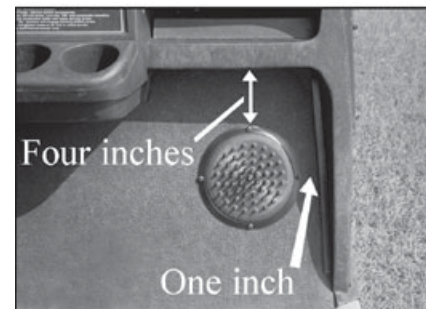

PASSENGER SIDE: The Soft-Swipe™ should be mounted on the inverted kickboard for the most convenient location. The top edge should be approximately 4" from the top of the kickboard as shown. The right edge of the SoftSwipe™ should be approximately 1" from the right edge of the kickboard as shown. Use 4 screws on the passenger side.

CAUTION: Do not over tighten the screws. This could cause damage to the mounting base.

WARNING: Not mounting the SoftSwipe™ as shown and instructed, could lead to potential safety issues.