


Part # 53565 CC Precedent

Seat belt bracket #31265

Hardware package #53564

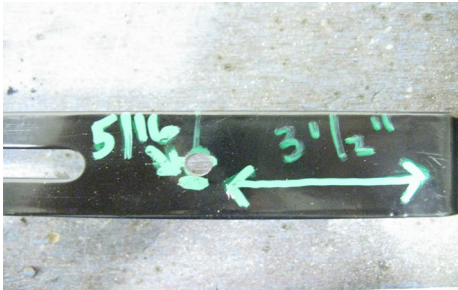

Using 5/16 bit, measure 3 ½ inches from end of bracket and mark for drilling.




Drill out hole being sure to center with the slots.



Dry fit bracket onto struts and mark holes for drilling.



Drill out marked holes with 5/16 bit.

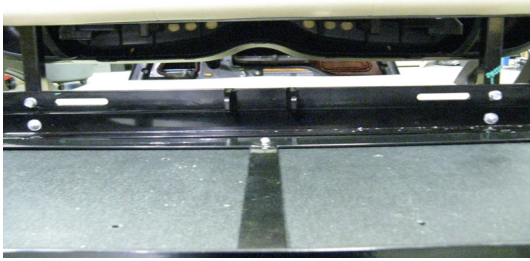

Using supplied hardware mount seat belt bracket to struts.