



Enclosure Installation Instructions

MADJAX **X⁴**
VEHICLES

66131 (Black) 66132 (Linen)



ITEMS INCLUDED

- Strut Covers (Driver & Passenger Side)
- Valences (Front, Rear, Driver, & Passenger Side)
- Enclosure Panels (Driver Side, Passenger Side, & Rear)

STEP 1

Remove windshield as shown.



STEP 2

Wrap the front strut cover around the front struts and attach with the small zipper located on the inside.

NOTE: The windshield clip cut-outs are located on the top of the strut covers.



STEP 3

Reinstall your windshield by marking the OEM mounting hole on top of the front strut cover with an "X." Cut a very small "X" with a razor knife enough to insert windshield hardware through. Place lower half of windshield on hardware mounts and slip the Windshield strut holders over the struts.



STEP 4

Starting with the passenger or driver side panel, feed piping down the middle track of the triple track. Pull side panel towards rear until the front zipper is even with the zipper on the front strut cover from Step 1. Connect and zip all the way down. Repeat on the other side.

Note: Make sure excess panel is held even with track to avoid binding when sliding into track.



STEP 5

Part A


For the rear panel, you will need to disconnect the rear camera wiring. To do this, remove the cover on the rear passenger side to expose the camera cable. Unscrew the camera cable and then using a screw driver pop the tab on the wiring channel to allow the camera cable to hang freely.



STEP 5

Part B

Next, with the camera wiring out of the way, feed the piping down the middle track. With hooks and storage straps on the inside pull the rear panel so it will connect with the zipper on the side panels, ensuring the cutout for the camera is centered. Connect and zip all the way down. The rear panel should go on outside of rear safety grab bar.

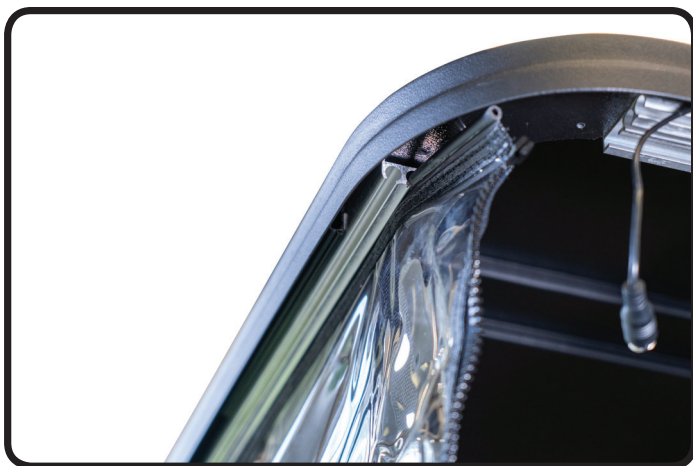

STEP 6

Using the Front Valance, slide it into the outside track. Pull until it is fully stretched. Repeat this process with the remaining valances around the entirety of the vehicle.



STEP 7

To install the rear valance slide it along the outside track. Pull until it is fully stretched and the camera cutout is centered with the enclosure cut out. You will then feed the camera cable through the wiring channel on the top of the versa top as shown and reconnect the camera cable. NOTE with the enclosure installed you will not be able to use the corner covers.



STEP 8

Now that all pieces are on the cart, ensure the enclosure and valances are properly aligned to match cart body lines. When satisfied, zip all corners of enclosure and attach all valance hook and loop strips.



INSTALLATION COMPLETE