


Due to EMI on PDS and Drive Golf Car systems we have to isolate the strobe light from the car system. You cannot wire the strobe to key switch, foot switch or solenoid. What is to be done is add a 48 volt relay (3551A) are equivalent. The normally open relay contact will be the positive input to the strobe light. To activate the relay supply positive input to the coil from the key switch or solenoid.

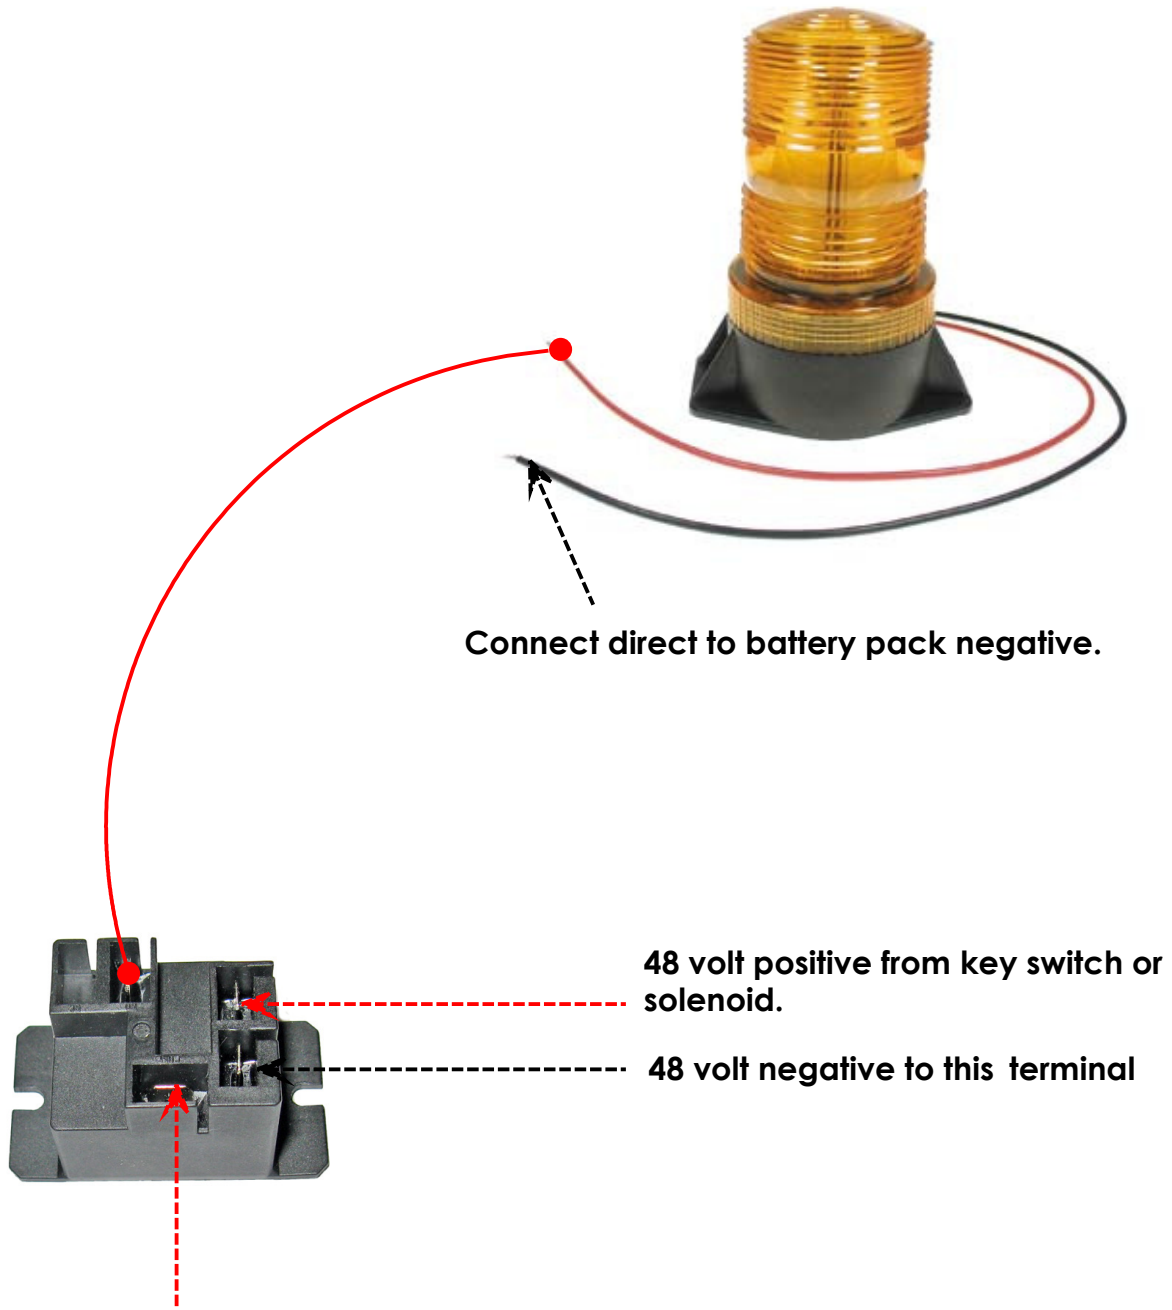

If using lesser voltage strobe select correct positive voltage from battery pack.