



5673 Turn Signal Head Wiring

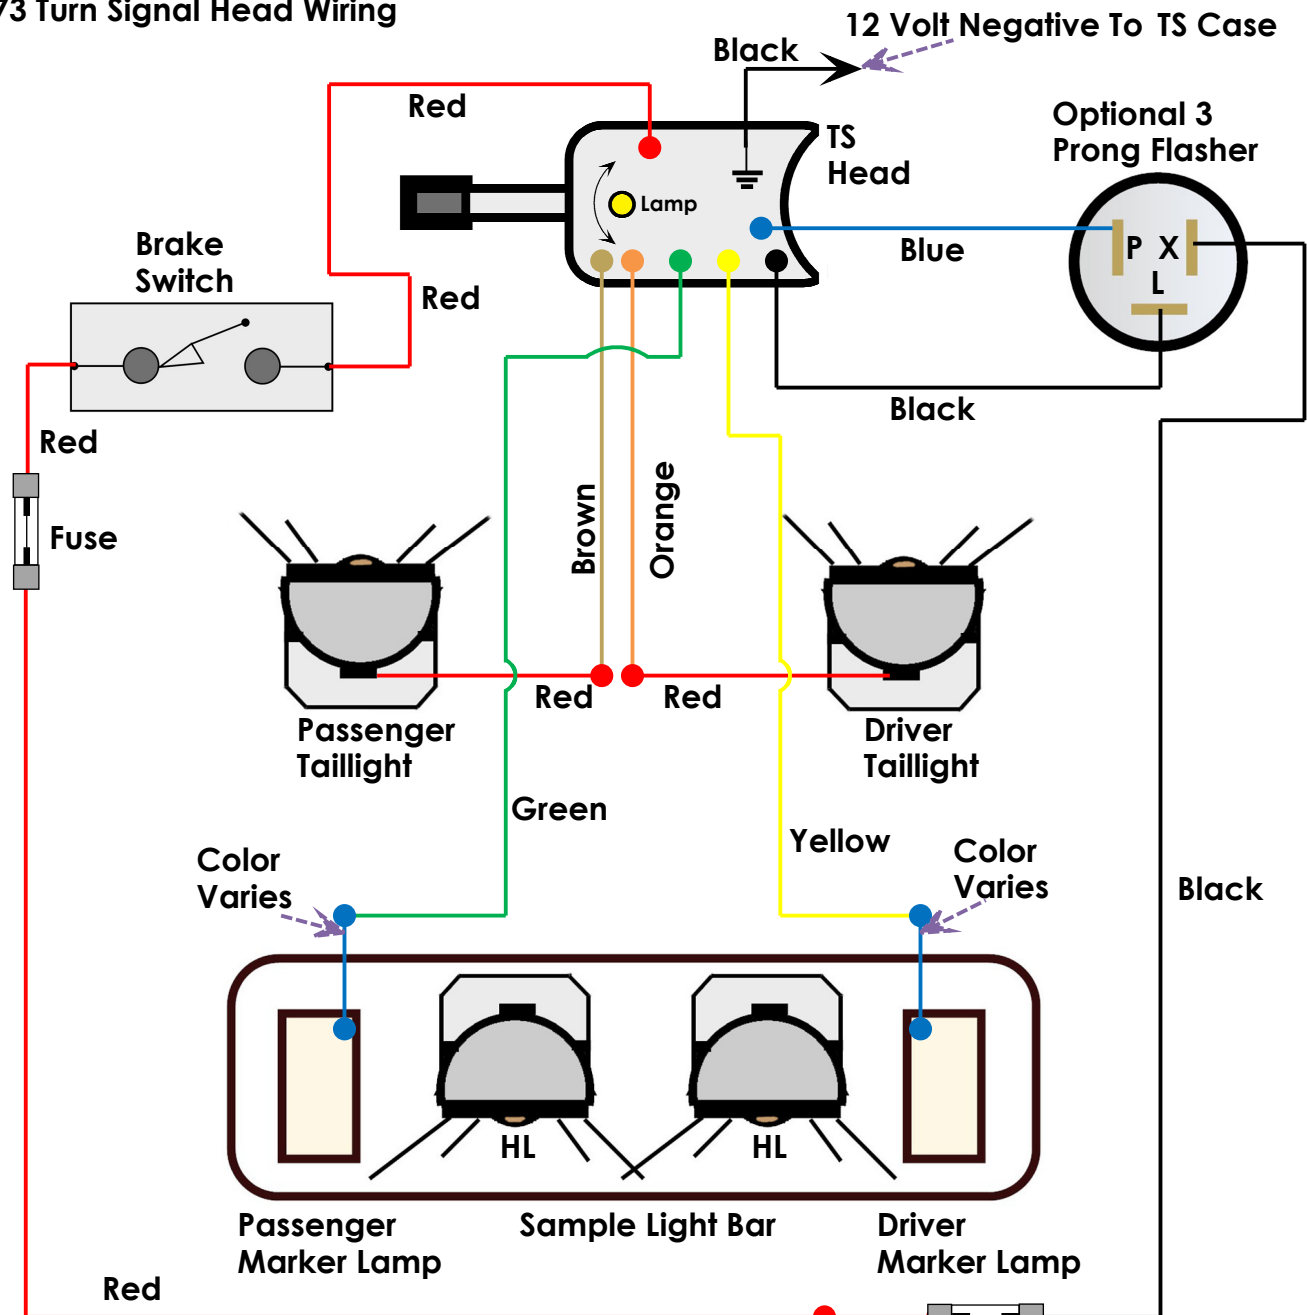

All circuits through the head are positive. For the head directional lamp to work you must apply a 12 negative to the head case. You must add a 3 prong flasher or connect blue wire to L black wire. The direction lamp will remain on and flash only in chosen direction.

Note: marker lamps must be independent of head light circuit.

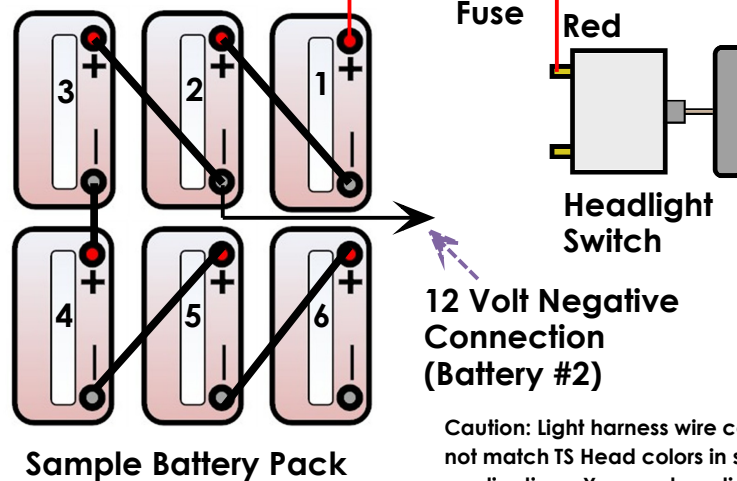

Caution: Light harness wire colors will not match TS Head colors in some applications. You must use light harness diagram to match TS wire colors.