Breezeasy Blower Connections For 24 Volt Systems

DS Club Car 48 Volt Pack

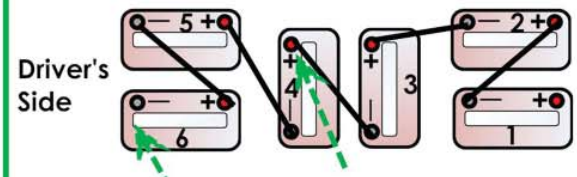

24 volt connections are from battery number 6 negative post to battery number 4 positive post

DS Club Car 36 Volt Pack

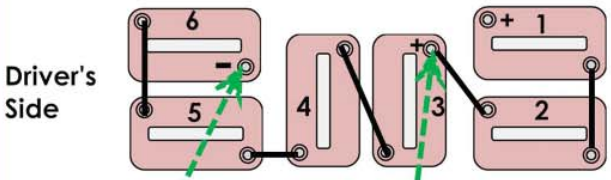

24 volt connections are from battery number 6 negative post to battery number 3 positive post

Precedent Model Club Car 48 Volt

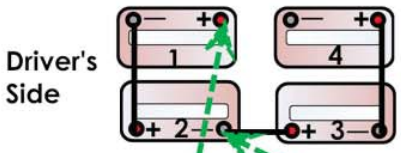

24 volt connections are from battery number 2 negative post to battery number 1 positive post

TXT E-Z-GO 36 Volt Pack

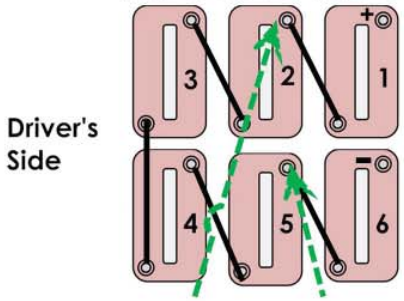

24 volt connections are from battery number 5 negative post to battery number 2 positive post

Marathon E-Z-GO Model 36 Volt Battery Pack

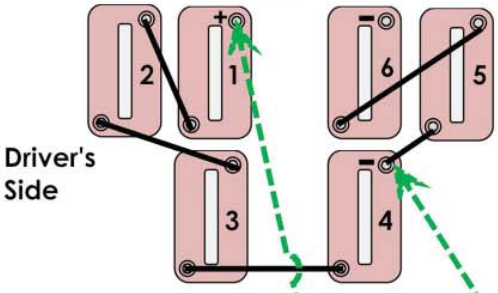

24 volt connections are from battery number 4 negative post to battery number 1 positive post

RXV E-Z-GO 48 Volt Pack

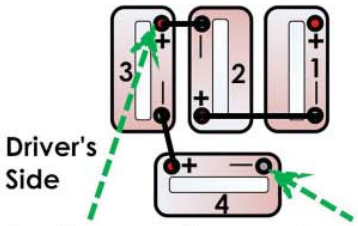

24 volt connections are from battery number 4 negative post to battery number 3 positive post

Yamaha G19 48 Volt Pack

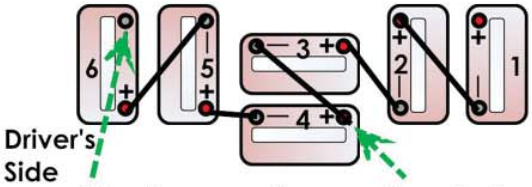

24 volt connections are from battery number 6 negative post to battery number 4 positive post

Yamaha 36 Volt Battery Pack

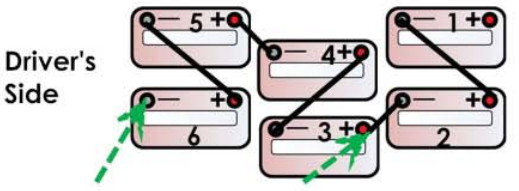

24 volt connections are from battery number 6 negative post to battery number 3 positive post

Wear appropriate eye protection at all times! If the car utilizes a run/tow switch place the switch in the Tow position before disconnecting the batteries.

Breezeasy Blower For 24 Volt Systems

Yamaha G22 48 Volt Pack

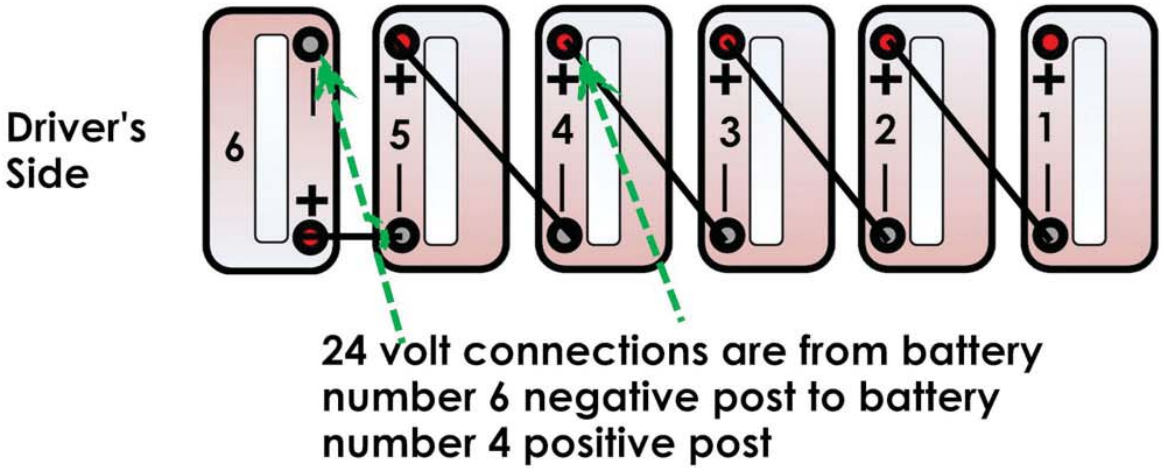

24 volt connections are from battery number 6 negative post to battery number 4 positive post

Yamaha Drive 48 Volt Pack

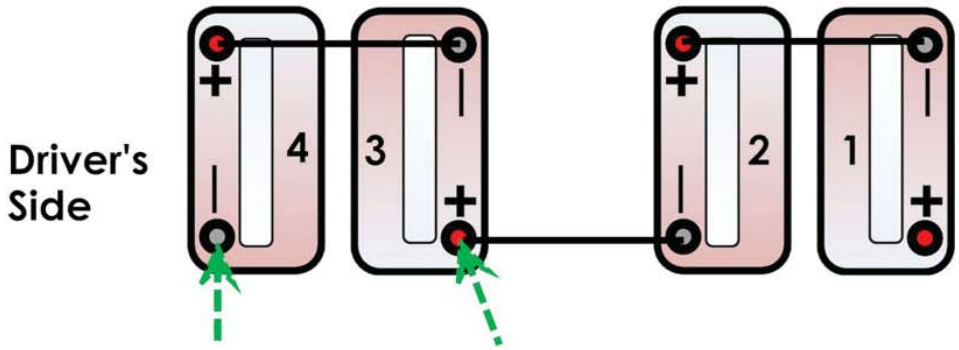

24 volt connections are from battery number 4 negative post to battery number 3 positive post

All Gas Cars 12 Volt Only

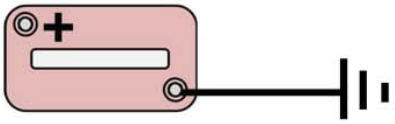

Connect Directly To Battery Positive Post And Battery Negative Post